

**Specifications:****Input Impedance:** 470K Ohm**Output Impedance:** 100 Ohm**Running Current:** 160mA**Power:** DC 9V adapter**Dimensions:**

73(L)\*43(W)\*50(H)mm

**Weight:** 220 g[www.joyoaudio.com](http://www.joyoaudio.com)

JOYO TECHNOLOGY CO.,LTD



this indicator shows the length of your recorded phrase, which makes overdubbing a lot easier as you can see where your loop begins and ends.

this knob controls Iron Loop's output signal level.

this indicator shows the current function state of this looper pedal, when it turns into red, the looper pedal enters into recording mode, and when it turns into blue, the looper pedal exits from recording mode, and play the recorded phrase.



# Ironloop

**IRONMAN**  
series  
Looper

## 1. Recording/Overdubbing

**Recording:** press the footswitch, the function state indicator turns into red, then it enters into recording mode, and starts recording, the ring status indicator shows the length of your recorded phrase, please note that for the first time recording, the LED light bar flickers every other light, press the footswitch again, it finishes recording, the pedal will play the recorded audio data automatically.

**Play the recording:** press the footswitch, the function state indicator turns into blue, the LED light bar on the ring status indicator flickers one by one, and start to play the recording.

**Overdub:** press the footswitch in play mode, the function state indicator changes from blue to red, and enters into recording mode again. Press the footswitch again, and exit recording mode, the function state indicator changes from red to blue, and enters into play mode. It will play the overdubbed parts. If in recording mode, not press the footswitch and exit recording mode, it will overdub automatically.

## 2. Undo recording

**Undo recording:** in play mode, press the footswitch once and hold for over 2 seconds, the function state indicator is in blue and flickers twice, and then undo the data recorded last time.

## 3. Redo recording

**Redo recording:** if delete by mistake, then need to restore the recording, in play mode, press the footswitch once and hold for 2 seconds, the function state indicator is in blue and flickers twice, and then it will redo the recording data deleted earlier.

## 4. Stop/Stop recording/Delete recording

**Stop/stop recording:** in play mode, press the footswitch twice, the function state indicator is in blue and flickers, then it stops playing.

**Delete all the data that has been recorded:** press the footswitch twice and during the second press, hold for over 2 seconds, the function state indicator flickers and finally extinguishes, and delete all the recorded data.