


Thank you for purchasing our product, please read these instructions carefully before using it.

I . Warning

1. Do not disassemble or repair this unit by yourself.
2. Do not use or store this unit in the following circumstances: high temperature, high humidity, dirty or strong shock places.
3. Do not drop off this unit or bump this unit off hard surface.
4. Do not use cleaning liquid or alcohol to clean this unit in case of damage.
5. Remove batteries if not using the unit for a long period of time.
6. Please turn off the power after use.
7. Please dispose the used battery properly.
8. Please replace a new battery when the LED light is dim
9. Don't adjust the volume from a very loud sound when using an earphone, in case your ear be hurt or the earphone be broken
10. Keep it away from scrap iron

II . Part Names and Functions

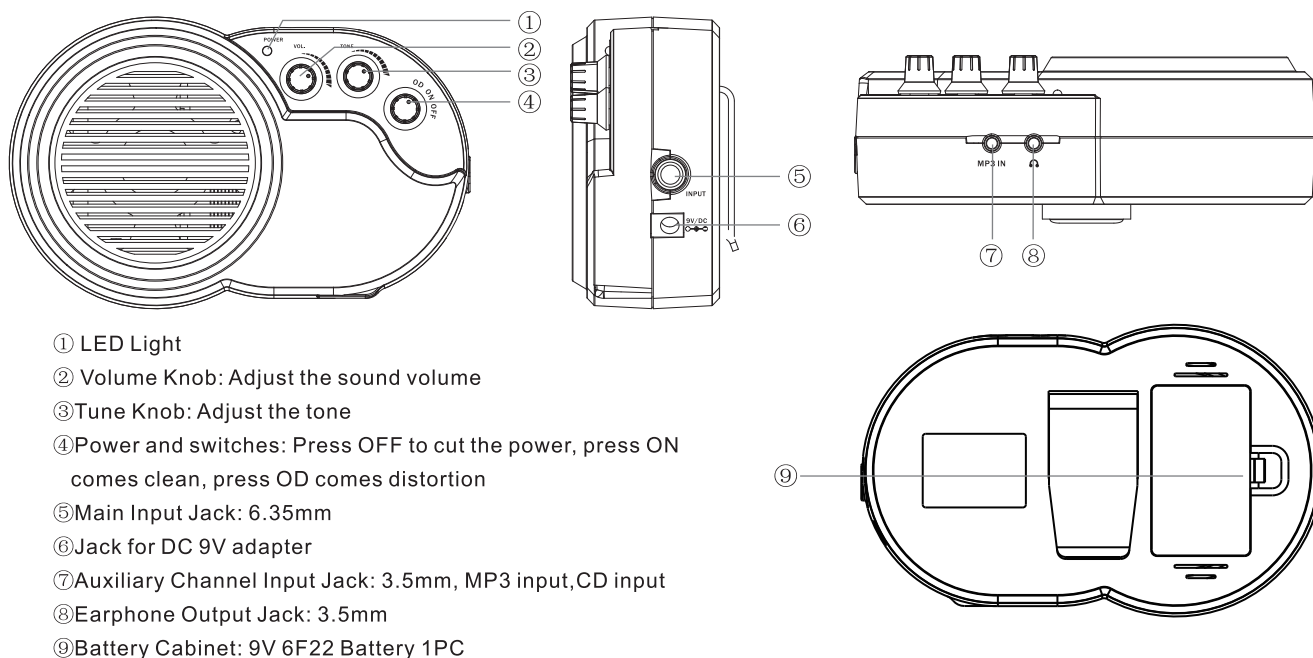

- ① LED Light
- ② Volume Knob: Adjust the sound volume
- ③ Tune Knob: Adjust the tone
- ④ Power and switches: Press OFF to cut the power, press ON comes clean, press OD comes distortion
- ⑤ Main Input Jack: 6.35mm
- ⑥ Jack for DC 9V adapter
- ⑦ Auxiliary Channel Input Jack: 3.5mm, MP3 input, CD input
- ⑧ Earphone Output Jack: 3.5mm
- ⑨ Battery Cabinet: 9V 6F22 Battery 1PC

III . Battery replacement

1. Press the front of the battery cover and then slide back to remove the cover. Take out the flat batteries.
2. Put the battery into the battery compartment by placing the negative(-) pole of battery facing inside. Insert the front of cover and then press down and push to close.

V . How to use Small Guitar Amplifier

1. Connect the CD or MP3 with the 3.5mm Auxiliary Channel Input Jack to get the sound accompaniment. The volume is controlled by the MP3 or CD itself instead of the amplifier. Adjust the volume of MP3 or CD when turn on the power
2. Turn the switch ON to get the clean sound, meantime adjust the volume with the volume knob, adjust the tone with the tone knob
3. Turn on the switch OD to get the distortion, meantime adjust the volume with the volume knob, adjust the tone with tone knob.
The degree of distortion is unchangable, unless changing the volume of the musical instrument
4. To get the loudest sound, please connect the amplifier with the power adapter

VI . Specifications


1. Power source: DC IN or a 6F22 battery, 1 piece
2. Power output: 3W
3. Impedance input: Main input: 100K Ω Auxiliary input: 10K Ω

感谢您购买我司的产品，请在使用前仔细阅读此说明书。

一、注意事项：

- 1、切勿擅自拆卸、改装、修理机器，以免发生短路。
- 2、勿在高温、潮湿、污浊、强烈震动处使用机器。
- 3、勿将机器摔落，或落在坚硬物体表面，以免机器操作失常。
- 4、勿用酒精等稀释性液体擦洗机器表面，以免机器受损。
- 5、长时间不使用机器时请将电池取出。
- 6、为节省电源，机器不使用时，请将电源关闭。
- 7、废旧电池请勿当作普通垃圾随意丢弃。
- 8、若电源指示灯在开关打到工作状态下不亮或很暗，请更换电池再使用。
- 9、在使用耳机听音时音量应从小开始调节，以免太大音量下损坏耳机或伤耳朵。
- 10、产品应尽量远离可能有铁屑的地方，以免喇叭吸入铁屑影响音质。

二、各部件名称及功能：

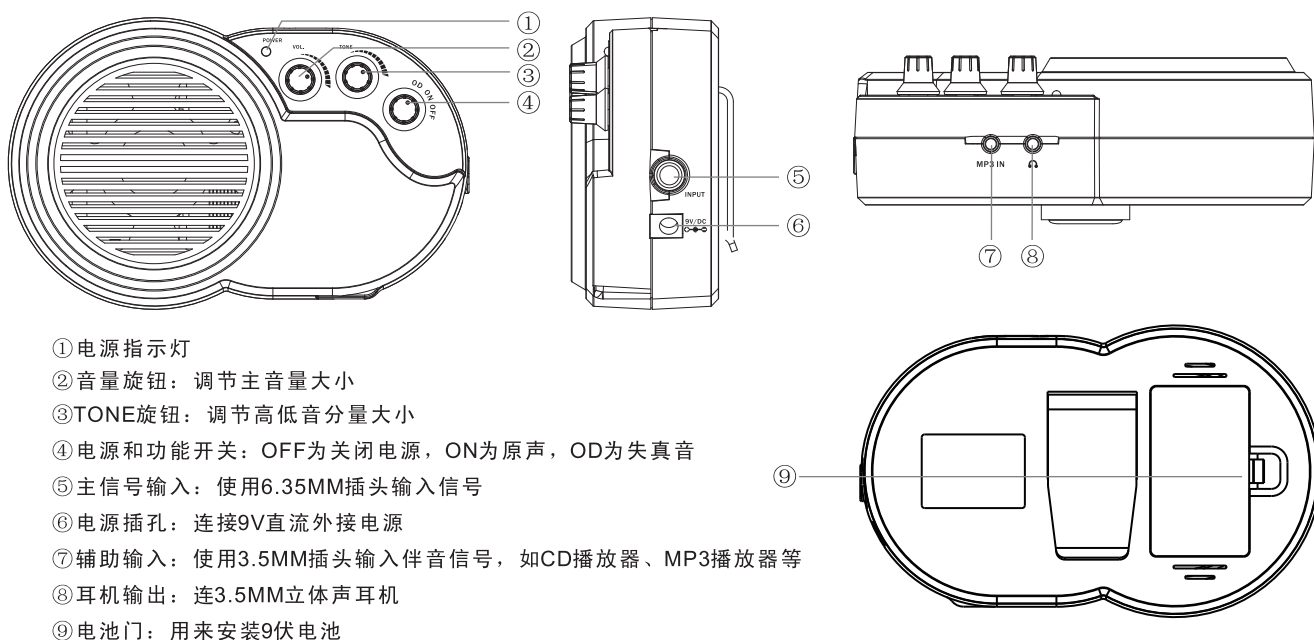

- ① 电源指示灯
- ② 音量旋钮：调节主音量大小
- ③ TONE旋钮：调节高低音分量大小
- ④ 电源和功能开关：OFF为关闭电源，ON为原声，OD为失真音
- ⑤ 主信号输入：使用6.35MM插头输入信号
- ⑥ 电源插孔：连接9V直流外接电源
- ⑦ 辅助输入：使用3.5MM插头输入伴音信号，如CD播放器、MP3播放器等
- ⑧ 耳机输出：连3.5MM立体声耳机
- ⑨ 电池门：用来安装9伏电池

三、装卸电池：

本机器出厂时机器内放有电池。

- 1、用手指轻轻抠出电池门，将电池门取下。
- 2、将9伏方块电池(6F22)按电池盒里所刻的正负极方向装上，扣上电池门。

四、使用说明：

- 1、当需要外接伴音信号时，从CD、MP3等音源设备用3.5MM插头连到辅助输入插孔，就可以使用伴音，辅助输入的音量不受音量电位器控制，需调节辅助输入音量时请调节音源设备的输入音量。在开关打到ON或OD均可使用。
- 2、开关调到ON时为原音功能，此时音量旋钮可以调节音量，TONE旋钮可以调节高低音。
- 3、开关调到OD时为失真功能，此时音量旋钮可以调节音量，TONE旋钮可以调节高低音。本产品固定失真度，若需调节失真度，可以调节乐器的输出音量来调节。
- 4、如需以最大音量使用，建议使用外接电源，效果更佳。

五、技术参数：

电源：9伏（DC IN 或 6F22 电池一粒）
输出功率：3W
输入阻抗：主输入100K Ω 。辅输入10K Ω

卓乐产品服务政策

一、在正常使用产品过程中，如果产品出现非人为损坏的性能故障，自购买之日起，消费者享有保修服务，保修期为12个月。

二、有下列情况之一者，消费者不能享受保修权益。

1、人为损坏；2、超过保修期；3、无保修卡及有效发票，但能够证明产品在保修期内的除外；4、保修卡与产品型号不符，或保修卡被涂改；5、未按说明书要求使用、维护、保养而造成产品损坏；6、未经卓乐公司授权，擅自拆卸、维修产品、或浸水、摔坏产品；7、其他不可抗力造成的损坏。

三、卓乐服务信息

消费者服务热线：0755-29765390

更多信息请访问：www.joyochina.cn



卓乐产品保修卡

产品型号	姓名	SN号码	购机日期
用户信息	电话		
	地址		
	发票号码		
	名称（加盖公章）		
销售单位信息	地址		
	电话		

品牌:JOYO

名称:电吉他音箱

执行标准:QB/T 4326-2012

制造商:深圳市卓乐科技有限公司

地址:广东省深圳市宝安区新安28区新安三路民工业大厦2楼 邮编:518133

售后服务热线:0755-29765390

Guitar Amps

产品合格证

检验结论

合格

检验员号

QC01

日期